



SERVICE PART LIST FOR #324-TP NOZZLE

ITEM NO.	DESCRIPTION	PARTS NO.	QUANTITY
1	BAFFLE	A0410	1
2	BUMPER	A0435	1
3	SET SCREW	S0130	3
4	O-RING	O0350	1
5	BALL BEARINGS	F0070	75
6	DISCHARGE TUBE	A0440	1
7	O-RING	O0330	1
8	NOZZLE TIP	A0451	1
9	BODY ADAPTER	A0423	1
10	SET SCREW	S0010	6
11	DÉTENT BALL	F0069	2
12	ROUND SPRING	F0020	1
13	SPACER	A0431	1
14	SCREW	S0130	2
15	SCREW	S0064	1
16	PIN	F0290	2
17	SPRING	F0175	2
18	INDICATING BAND	A0161	1
19	SET SCREW	S0016	1
20	VALVE SEAL PLUG	F0176	1
21	O-RING	O0031	1
22	PISTOL GRIP SCREW	S0044	2
23	ROLL PIN	F0278	1
24	PLUNGER	F0177	1
25	O-RING	O0245	1
26	O-RING	O0325	1
27	O-RING	O0321	1
28	VALVE BODY	A0473	1

29	HANDLE	A0024	1
30	O-RING	O0326	2
31	BALL BEARINGS	F0076	70
32	SET SCREW	S0116	3
33	ADAPTER	A0463	1
34	SCREEN	F0188	1
35	SWIVEL	A0494	1
36	GASKET	D0070	1
37	SCREW	S0112	1
38	BALL BEARING	F0073	2
39	INSERT	F0208	2
40	SPRING	F0091	2
41	SCREW	S0046	2
42	ACTUATOR	F0179	2
43	SCREW	S0110	2
44	DRIVE SCREW	S0131	4
45	SCREW	S0031	2
46	HANDLE RING	A0464	2
47	ROLL PIN	F0150	2
48	HANDLE ASSEMBLY	A1111	2