

SERVICE PART LIST FOR #372 NOZZLE

ITEM NO.	DESCRIPTION	PARTS NO.	QUANTITY
1	SCREW	S0025	1
2	SCREW	S0065	2
3	BAFFLE	A0010	1
4	RETAINER	A0020	1
5	SPINNING TEETH	D0010	1
6	BUMPER	D0022	1
7	O-RING	O0325	2
8	PATTERN SLEEVE	A0032	1
9	SET SCREW	S0120	2
10	BALL BEARING	F0070	46
11	DISCHARGE TUBE	A7040	1
12	O-RING	O0120	1
13	SPRING	F0097	1
14	SLEEVE	A0023	1
15	SCREW	S0130	2
16	BALL	F0069	2
17	COIL SPRING	F0025	1
18	RING	A0033	1
19	INDICATING BAND	A0042	1
20	NOZZLE BODY	A0051	1
21	SCREW	S0016	1
22	SCREW	S0090	1
23	STEM	F0182	1
24	O-RING	O0205	1
25	VAVLE BODY	A0071	1
26	SHAFT	F0105	2
27	SCREW	S0110	2

28	HANDLE	A0022	1
29	O-RING	O0200	2
30	SEAT	F0311	2
31	VALVE BALL	F0110	1
32	ADAPTER	A0082	1
33	BALL BEARINGS	F0076	35
34	O-RING	O0320	1
35	SCREW	S0112	1
36	SWIVEL	A0294	1
37	GASKET	D0070	1
38	SCREW	S0114	1
39	TRUNNION	F0100	2
40	O-RING	O0080	2
41	SCREW	S0131	4
42	SCREW	S0112	2
43	PISTOL GRIP SCREW	S0044	1
44	PISTOL GRIP	A0112	1
45	SCREW	S0116	1
46	SCREEN	F0138	1